



Originalfernbedienung    Ersatzfernbedienung

|   |        |   |                  |
|---|--------|---|------------------|
|    | Power  |    | Power            |
|    | Mute   |    | Mute / Dimmer    |
|    | Hold   |    | Stop / Hold      |
|    | ♪      |    | Sound / Title    |
|    | Sub    |    | Subtitle / EQ    |
|    | 16:9   |    | Picture / Format |
|    | TV/TX  |    | TV/Radio /       |
|    | Double |    | D.Menu / Top     |
|    | [ ]    |    | Setup / OPT /    |
|    | Mix    |    | Text / Goto      |
|   | AV     |   | AV / Input / RDS |
|  | Menu   |  | Menu / Home      |
|  | Up     |  | Up               |
|  | Left   |  | Left             |
|  | OK     |  | OK               |
|  | Right  |  | Right            |
|  | Down   |  | Down             |

Originalfernbedienung    Ersatzfernbedienung

|   |      |   |                    |
|---|------|---|--------------------|
|    | Swap |    | Back / Return      |
|    | Vol+ |    | Vol+               |
|    | PP   |    | Smart / List       |
|    | PR+  |    | CH+ / Page+        |
|    | Vol- |    | Vol-               |
|    | PR-  |    | CH- / Page-        |
|    | 1    |    | 1                  |
|    | 2    |    | 2                  |
|    | 3    |    | 3                  |
|    | 4    |    | 4                  |
|   | 5    |   | 5                  |
|  | 6    |  | 6                  |
|  | 7    |  | 7                  |
|  | 8    |  | 8                  |
|  | 9    |  | 9                  |
|  | -/-- |  | Guide / EPG / -/-- |
|  | 0    |  | 0                  |



