

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Help		D. Menu
	TV Format		Format
	TV / Radio		TV/R
	Mode		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu

Originalfernbedienung Ersatzfernbedienung

	Recall		Back
	<< REW		<<
	Stop		Stop
	Play / Pause		Play
	Play / Pause		Pause
	>> FF		>>
	Rec		Rec
	Exit		Exit
	Up		Up
	Left		Left
	OK / Enter		Ok
	Right		Right
	Down		Down
	Info		Info
	EPG		Guide
	File List		List
	I> Slow	 + 	Shift + Pause




Originalfernbedienung Ersatzfernbedienung

	I<< Prev		I<<
	>>I Next		>>I
	Red / Audio		Red
	Red / Audio		Dual
	Green / Subtitle		Green
	Green / Subtitle		Subt
	Yellow / Sleep		Yellow
	Yellow / Sleep		Sleep
	Blue / Text		Blue
	Blue / Text		Text
	Status		Shift + Info
	FAV		Pre Ch
	Option		Options
	Find		3D

Originalfernbedienung Ersatzfernbedienung

