


















































Originalfernbedienung Ersatzfernbedienung

Red		Red / Netflix / Search
TV		AV / Input / RDS
Sys/Serv		D.Menu / Top
Browse		Smart / List
Lang./Rewind		<< / Tune-
Epg	 + 	Shift + Guide / EPG / -/--
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7
8tuv		8
9wxyz		9
Guide Pilote		Guide / EPG / -/--
0/10		0
FAV Pref.		Fav / Marker / PC

Originalfernbedienung Ersatzfernbedienung


















1. ?		1
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
Freeze		Pause / Step / Freeze
Radio		TV/Radio /
East		Rec / Rec Mode
H/V Play		Play / Slow
LNB F.Forward		>> / Tune+
Menu Up		Up
Mute		Mute / Dimmer
Opt?		Setup / OPT /
App	 + 	Shift + Green / APP /
Info		Info / Angle
Subt.List		Subtitle / EQ
Sleep Timer		Sleep / Timer
Text		Text / Goto







 
 











Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Zoom	 Zoom / Size		
Menu	 Menu / Home		
PWR On/Off	 Power		
Display	 Display / Media		
Menu Left	 Left		
Menu Right	 Right		
Exit	 Exit / Cancel / Clear		
Menu Down	 Down		
Back	 Back / Return		
Volume+	 Vol+		
CH/Page+	 CH+ / Page+		
Volume-	 Vol-		
Audio	 Audio / Lang I/II		
CH/Page-	 CH- / Page-		



Originalfernbedienung Ersatzfernbedienung



TV		TV/Radio /
Interat		Info / Angle
Store		Menu / Home
Home Cinema		Smart / List
TV/SAT		AV / Input / RDS
Red		Red / Netflix / Search
5jkl		5
6mno		6
7pqrm		7
8tuv		8
9wxyz		9
Guide Pilote		Guide / EPG / -/--
0/10		0
FAV Pref.		Fav / Marker / PC
4ghi		4
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat

Originalfernbedienung Ersatzfernbedienung

Blue		Blue / Prime Video / Random
Search		Shift + Red / Netflix /
H/V Play		Play / Slow
Menu Down		Down
Video		Shift + 4
Menu Up		Up
Display		Display / Media
Menu Left		Left
Menu Right		Right
Exit		Exit / Cancel / Clear
PWR On/Off		Power
Volume+		Vol+
CH/Page+		CH+ / Page+
Volume-		Vol-
Audio		Audio / Lang I/II
CH/Page-		CH- / Page-
1. ?		1



Originalfernbedienung Ersatzfernbedienung Originalfernbedienung Ersatzfernbedienung

2abc		2
3def		3

