
 








 





























Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Display		Display / Media
	Setup		Setup / OPT /
	Mute		Mute / Dimmer
	Menu		Menu / Home
	Music		Red / Netflix / Search
	Copy		Info / Angle
	Zoom		Zoom / Size
	Tv System		TV/Radio /
	Browser		D.Menu / Top
	Vol-		Vol-
	Vol+		Vol+
	Guide		Guide / EPG / -/-
	Return		Back / Return
	Up		Up
	Left		Left
	OK		OK

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Down		Down
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Time Shift		Sound / Title
	0		0
	Goto		Text / Goto
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold



