 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	<		Shift + Left
	>		Shift + Right
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	Guide		Guide
	i		Info
	Exit		Exit
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Vol +		Vol +
	Vol -		Vol -
	Mute		Mute
	Filelist		Smart
	Playlist		Media
	P +		Ch +
	P -		Ch -
	<<		<<



