


 


 



 


 




 


 


 



 

 
 

 





 


 
 






Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject / Surround
	Power		Power
	Red/Program		Red / Netflix / Search
	Green/Marker		Green / APP / Repeat
	Yellow/Digest		Yellow / YouTube / Repeat
	Blue/Zoom		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	Sleep		Sleep / Timer
	4		4
	5		5
	6		6
	SW+		CH+ / Page+
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	SW-		CH- / Page-
	Clear		Exit / Cancel / Clear
	0		0
	Search		Shift + Red / Netflix /
	Mute		Mute / Dimmer
	Display		Display / Media
	Setup		Setup / OPT /
	Volume+		Vol+
	Option		Shift + Setup / OPT / Tools
	Home		Menu / Home
	Volume-		Vol-
	Top Menu		D.Menu / Top
	Pop-Up/Menu		Smart / List
	Up		Up
	Left		Left
	Enter		OK
	Right		Right


 

 






 
 
 
 


 







Originalfernbedienung Ersatzfernbedienung

	Return		Back / Return
	Down		Down
	On Screen		Picture / Format
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	<<I		I<< / Preset-
	I>>		>>I / Preset+
	<<</>>> Tuning		<< / Tune-
	>>/Tuning >>		>> / Tune+
	Dimmer		Shift + Mute / Dimmer
	Status		Text / Goto
	I<</>< Preset		Shift + I<< / Preset-
	>>I/Preset >		Shift + >>I / Preset+
	PIP		Info / Angle
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

	Memory		Shift + Smart / List / List
	Shuffle		Shift + Eject / Surround
	Repeat		Shift + Green / APP / APP /
	A-B		Shift + Yellow / YouTube /
	iPod		Shift + Display / Media
	TV		TV/Radio /
	STB		Shift + 3
	Tuner		Shift + 6
	Disc/USB/Net		Shift + 8
	AUX		Shift + 7
	Portable		AV / Input / RDS

