



**Originalfernbedienung Ersatzfernbedienung**

	Standby		Shift + Power
	Power		Power
	CD		Shift + 3
	MD/CD-R		Shift + 5
	XM		Shift + Guide / EPG / -/-
	Sleep		Sleep / Timer
	DVD		Shift + 2
	D-TV/CBL		Shift + 1
	TUNER		Shift + 6
	Multi CH In		Shift + 0
	V-AUX / Dock		Shift + 7
	DVR		Shift + 4
	NET		Shift + 9
	USB		Shift + 8
	Volume +		Vol+
	Volume -		Vol-
	Mute		Mute / Dimmer

**Originalfernbedienung Ersatzfernbedienung**

	Stereo		1
	Music		2
	Entertain		3
	Movie		4
	Standard		5
	Select		6
	Extd Sur.		7
	Direct ST		8
	Speakers		9
	Enhancer		Guide / EPG / -/-
	Night		0
	Straight		Fav / Marker / PC
	Level		Sound / Title
	Up / Preset/CH +		Up
	Set Menu		Menu / Home
	Left/-		Left
	Enter		OK



 

 

 





 

 

 

 

 



 















**Originalfernbedienung    Ersatzfernbedienung**

	Standby		Shift + Power
	Power		Power
	CD		Shift + 3
	MD/CD-R		Shift + 5
	XM		Shift + Guide / EPG / -/-
	Sleep		Sleep / Timer
	DVD		Shift + 2
	DTV/CBL		Shift + 1
	Tuner		Shift + 6
	Multi CH In		Shift + 0
	V-AUX / Dock		Shift + 7
	DVR		Shift + 4
	USB		Shift + 8
	NET		Shift + 9
	Volume +		Vol+
	Volume -		Vol-
	Mute		Mute / Dimmer

**Originalfernbedienung    Ersatzfernbedienung**

	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	ENT		Fav / Marker / PC
	Band		Sound / Title
	Up / Preset+		Up
	Up / Preset+		>>  / Preset+
	Srch Mode		Menu / Home
	Left / A/B/C/D/E-		Left
	Enter		OK



