



 

 

 
 
 
 
 
 
 



 

 













 

 


 
 






 







 




 
 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	Light		Media
	Text		Text
	[≡?]/SUB-T		Subt
	[≡o]/Audio		Dual
	[≡i]/EPG		Guide
	[≡x]/Sat.List		List
	[≡♦]/IPI		Format
	<<		<<
	Play		Play
	Pause		Pause
	>>		>>
	I<<		I<<
	Stop		Stop
	Rec		Rec
	>>I		>>I

Originalfernbedienung Ersatzfernbedienung

	FAV		Pre Ch
	Setup		Options
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Info		Info
	P+		Ch +
	P-		Ch -
	Red/Radio		Red
	Green/Sleep		Green





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Yellow/S/M/D		Yellow				
	Blue/Res		Blue				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	3D		3D				
	Recall		Back				

