







 


 

 


 

 


 
 

 
 



 

 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	P.Mode	 + 	Shift + Format
	S.Mode		Dual
	Nicam / A2	 + 	Shift + Dual
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide

Originalfernbedienung Ersatzfernbedienung

	Recall / Mouse		Back
	FAV		Pre Ch
	Red		Red
	Settings		Options
	Home		Smart
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Source		AV
	Info		Info
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Menu		Menu
	Exit		Exit

 


 

 
 


 
 




Originalfernbedienung Ersatzfernbedienung

	Vol +		Vol +
	Vol -		Vol -
	Media		Media
	TV / Radio		TV/R
	CH +		Ch +
	CH -		Ch -
	Play/Pause / Text		Play
	Play/Pause / Text		Pause
	Play/Pause / Text		Text
	<< / Size		<<
	<< / Size		Eject
	>> / Reveal		>>
	Stop / Hold		Stop
	I<< / Index		I<<
	>>I / Subpage		>>I
	Cancel	 + 	Shift + Exit
	Subtitle		Subt

Originalfernbedienung Ersatzfernbedienung

	Auto	 + 	Shift + Media
	Repeat	 + 	Shift + Text
	A-B	 + 	Shift + Play
	Aspect		Format

