




 

 

 
 
 
 
 

 



 

 














 









 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	Light		Smart
	Text		Text
	Subt		Subt
	Audio		Dual
	EPG		Guide
	Sat List		List
	IPI		Format
	<<		<<
	Play		Play
	Pause		Pause
	>>		>>
	I<<		I<<
	Stop		Stop
	Rec		Rec
	>>I		>>I

Originalfernbedienung Ersatzfernbedienung

	FAV		Pre Ch
	Setup		Options
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	V+		Vol +
	V-		Vol -
	Mute		Mute
	Info		Info
	P+		Ch +
	P-		Ch -
	Red/Radio		Red
	Green/Sleep		Green





Originalfernbedienung Ersatzfernbedienung

	Yellow/S/M/D		Yellow
	Blue/Res		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	3D		3D
	Recall		Back

Originalfernbedienung Ersatzfernbedienung

