




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Audio / Nicam/A2		Dual
	Aspect		Format
	P Mode		Shift + Format
	S Mode		Shift + Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch

Originalfernbedienung Ersatzfernbedienung

	Recall		Back
	Display		Info
	Freeze		Shift + Pause
	Rec		Rec
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Sleep		Sleep
	Source		AV
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Exit		Exit





Originalfernbedienung Ersatzfernbedienung

	Subtitle		Subt
	CH +		Ch +
	CH -		Ch -
	Home		Smart
	Vol +		Vol +
	Vol -		Vol -
	Hold / Play/Pause	+	Shift + Stop
	Hold / Play/Pause		Play
	Hold / Play/Pause		Pause
	Reveal / <<		<<
	Size / >>		>>
	Size / >>		Eject
	Index / Stop		Stop
	Index / Stop	+	Shift + Info
	I<<		I<<
	S.Page / >>I		>>I
	S.Page / >>I	+	Shift + Subt

Originalfernbedienung Ersatzfernbedienung

	Text		Text
	EPG		Guide
	Mouse		Media

