 




 

 


 

 





















Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Auto		Smart / List
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Shift + Guide / EPG / -/--
	0		0
	Recall		Back / Return
	Vol+		Vol+
	Aspect		Shift + Picture / Format

Originalfernbedienung Ersatzfernbedienung

	Audio		Audio / Lang I/II
	CH+		CH+ / Page+
	Vol-		Vol-
	Display		Display / Media
	CH-		CH- / Page-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Input		AV / Input / RDS
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	FAV		Fav / Marker / PC



 


 

 

 

 





Originalfernbedienung Ersatzfernbedienung

	FAV-	 + 	Shift + CH- /
	FAV+	 + 	Shift + CH+ /
	EPG		Guide / EPG / -/--
	Text		Text / Goto
	Hold	 + 	Shift + Stop /
	Tv/Radio		TV/Radio /
	Subtitle		Subtitle / EQ
	Index		Info / Angle
	Size		Zoom / Size
	Reveal		Setup / OPT /
	Subpage		Eject / Surround
	Media	 + 	Shift + Display / Media
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	>>		>> / Tune+
	Rec		Rec / Rec Mode

Originalfernbedienung Ersatzfernbedienung

	Stop		Stop / Hold
	<<		<< / Preset-
	>>		>> / Preset+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

