


 



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch
	Recall		Back
	Lang		Dual
	Tv/Radio		TV/R
	Dev.List		List

Originalfernbedienung Ersatzfernbedienung

	Info		Info
	Menu		Menu
	Exit		Exit
	Text		Text
	EPG		Guide
	Up/CH+		Up
	Down/CH-		Down
	Right		Right
	Left		Left
	Enter		Ok
	Vol+		Vol +
	Vol-		Vol -
	Stop		Stop
	Play		Play
	Rec		Rec
	Pause		Pause
	<<		<<





Originalfernbedienung Ersatzfernbedienung

	>>		>>
	I<<		I<<
	>>		>>
PAGE UP	Page Up	+ CH	Ch +
PAGE DOWN	Page Down	CH -	Ch -
HDMI	HDMI	APP MEDIA	Media
ZOOM	Zoom	ZOOM ▲	Eject
SUBTITLE	Subtitle	AD SUBT	Subt
FILELIST	Filelist	SETTINGS OPT	Options
GOTO	Goto	ECO 3D	3D
REPEAT	Repeat	SHIFT + REPEAT TEXT	Shift + Text
TIMESHIFT	Timeshift	TIMER AV	AV
AUTO	Auto	PICTURE FORMAT	Format
	Red	A	Red
	Green	B	Green
	Yellow	C	Yellow
	Blue	D	Blue

Originalfernbedienung Ersatzfernbedienung

