 

 

 
 
 
 
 
 

 
 



 
 
 
 
 

 

 



 

 




 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	Subtitle		Subt
	Angle/Del		Exit
	Language		Dual
	Return		Back
	Time	 + 	Shift + AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/10		0

Originalfernbedienung Ersatzfernbedienung

	+10		Pre Ch
	Mute		Mute
	N/P		Format
	PBC		3D
	OSD		Smart
	Setup		Options
	Title/TTX		Text
	Menu		Menu
	Prog/EPG		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Play		Play
	Stop		Stop
	Pause		Pause





Originalfernbedienung Ersatzfernbedienung

	<<		<<
	>>		>>
	l<<		l<<
	>>l		>>l
	Tv/Radio		TV/R
	Source		AV
	L/R		Media
	Slow		Sleep
	Rec		Rec
	Step		List
	Vol+		Vol +
	Vol-		Vol -
	Red/Repeat		Red
	Green/A-B		Green
	Yellow/Zoom		Yellow
	Blue/Clear		Blue

Originalfernbedienung Ersatzfernbedienung