



 
 
 





 
 
 
 
 
 
 



 


 


 
 
 


 

 

 
 

 
 


 
 

 

 

 
 
 
 

 


 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Menu		Menu
	Exit		Exit
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info
	Audio / I/II		Dual
	Red		Red

Originalfernbedienung Ersatzfernbedienung

	Green		Green
	Yellow		Yellow
	Blue		Blue
	Q.Menu		D. Menu
	Back		Back
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	EPG		Guide
	YouTube		Media
	Vol +		Vol +
	Vol -		Vol -
	Source		AV
	Text		Text
	P +		Ch +





Originalfernbedienung Ersatzfernbedienung

	P -		Ch -
	List		List
	Netflix		Smart
	Play		Play
	Pause		Pause
	Stop		Stop
	Rec		Rec
	<<		<<
	<<		<<
	>>		>>
	>>		>>

Originalfernbedienung Ersatzfernbedienung






 

 

 
 



 
 

 

 




 

 
 
 










**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	Play		Play
	Pause / Mix		Pause
	Pause / Mix		Shift + Text
	Stop / Hold		Stop
	Size		Format
	<< / Timer		<<
	<< / Timer		Shift + Power
	I<< / Index		I<<
	>>I / Reveal		>>I
	>> / Cancel		>>
	>> / Cancel		Shift + Exit
	Info		Info
	Audio / I/II		Dual
	Text		Text
	Back / Del		Back

**Originalfernbedienung    Ersatzfernbedienung**

	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Settings		Options
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down







Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Netflix	Media		
Vol +	Vol +		
Vol -	Vol -		
YouTube	Shift + Media		
Home / Source	AV		
Home / Source	Smart		
P +	Ch +		
P -	Ch -		
Red	Red		
Green	Green		
Yellow	Yellow		
Blue	Blue		
EPG	Guide		
List	List		
Q.Menu	Menu		

