





 










 



 


 
 

 










 


 
 
 
 
 
 
 






 



 
 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

	Back / Del		Back
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Menu		Menu
	EPG		Guide
	YouTube		Media
	Vol +		Vol +
	Vol -		Vol -
	Home / Source		AV
	Text		Text
	P +		Ch +
	P -		Ch -
	List		List
	Netflix		Smart





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Play		Play
	Pause / [≡]		Pause
	Stop / [≡]		Stop
	[≡↓]		Rec
	<< / [≡⊕]		<<
	l<< / [≡i]		l<<
	>> / [≡X]		>>
	>>l / [≡?]		>>l
	Exit		Exit

