

DIGITEK
HDD
DIG001

MANDIS SHOP S.L.
SANT CUGAT DEL VALLES
info@mandis.es



Layout Keys	Direct	Shift	Layout Keys	Direct	Shift
POWER	Power		V	Down	
MUTE	Mute		EXIT	ADD/Clear	
1	1		BACK	P=P/Return	
2	2		VOL+	Vol+	
3	3		VOL-	Vol-	
4	4		INFO	Display	
5	5		FAV(LIST)	Eject	Sort/Slow
6	6		CH+	CH+	
7	7		CH-	CH-	
8	8		TEXT	Repeat	
9	9		<?>	Audio	
0	0		...	Subtitle	
VOD	Setup		TV/RADIO	Timeshift	
MENU	Menu		OPT+	Timer	
>PLAY	Play		SOURCE	Fileplay	
[]PAUSE	Pause/Step		V-FORMAT	Zoom	PS/IS
[]STOP	Stop		WIDE	Rec To	PIP
oRECORD	Rec/OTR				
<<	<<				
>>	>>				
<<	<<				
>>	>>				
RED	DV/USB				
GREEN	HDD				
YELLOW	DVD				
BLUE	Source				
MEDIA	Navigation				
EPG(GUIDE)	Goto				
OK	Select				
^	Up				
<	< Skip				
>	Skip >				