




 




ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	 / AV
-/--	-/--
DISPLAY	
ASPECT	
MIX	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SLEEP	SLEEP
TIMESHIFT	TV/DTV
INDEX	INFO

ORIGINAL	SUPERIOR
EPG	EPG
FAV	FAV
AUTO	
HOLD	
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
CANCEL	SHIFT+EXIT
REVEAL	SHIFT+ 
SIZE	SHIFT+ 
P. MODE	SHIFT+ 
SUBTITLE	SHIFT+ 
SUBPAGE	SHIFT+DOWN
FAV -/+	SHIFT+ V-/+
SKIP PREV	SHIFT+ P -
SKIP NEXT	SHIFT+ P+
TV / RADIO	SHIFT+ TV/DTV
S. MODE	SHIFT+FAV
STOP	SHIFT+ 
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE