


 

 


 



 




 

 

 
 

 

 


 

 





 














 



 





 

 



 

 

 

 

 





Original	Replacement	Original	Replacement
 Power	 Power	 CH+	 CH+ / Page+
 Mute	 Mute / Dimmer	 Vol-	 Vol-
 1	 1	 Source	 AV / Input / RDS
 2	 2	 CH-	 CH- / Page-
 3	 3	 Up	 Up
 4	 4	 Left	 Left
 5	 5	 OK	 OK
 6	 6	 Right	 Right
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 Down	 Down
 9	 9	 Menu	 Menu / Home
 CH.List	 Smart / List	 Rec	 Rec / Rec Mode
 0	 0	 Timeshift	 Shift + Pause / Step /
 Recall	 Back / Return	 Timer	 Shift + Sleep / Timer
 Vol+	 Vol+	 Rec.List	 Shift + Smart / List
 PIC.Mode	 Picture / Format	 Red	 Red / Netflix / Search
 S.Mode	 Sound / Title	 Green	 Green / APP / Repeat



 





Original	Replacement	Original	Replacement
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			





Original	Replacement
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Aspect	 Shift + Picture / Format
 Tv/Radio	 TV/Radio /
 Sleep	 Sleep / Timer
 Subtitle	 Subtitle / EQ
 Index	 Info / Angle
 Reveal	 D.Menu / Top
 Audio	 Audio / Lang I/II
 Display	 Display / Media
 Text	 Text / Goto
 Size	 Zoom / Size
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Subpage	 Setup / OPT /
 Stop	 Stop / Hold
 Hold	 Shift + Stop / Hold

Hold

Original	Replacement
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+

