









 

 










Original	Replacement	Original	Replacement
 Power	 Power	 Info	 Info / Angle
 Mute	 Mute / Dimmer	 [I]/Menu	 Menu / Home
 Red	 Red / Netflix / Search	 Up	 Up
 Green	 Green / APP / Repeat	 Source	 AV / Input / RDS
 Yellow	 Yellow / YouTube / Repeat	 Left	 Left
 Blue	 Blue / Prime Video / Random	 OK	 OK
 << / [≡o]	 << / Tune-	 Right	 Right
 >> / [≡?]	 >> / Tune+	 Down	 Down
 << / [≡+]	 << / Preset-	 EPG	 Guide / EPG / -/-
 >> / [≡..]	 >> / Preset+	 Exit	 Exit / Cancel / Clear
 Play	 Play / Slow	 Vol+	 Vol+
 Pause	 Pause / Step / Freeze	 FAV	 Fav / Marker / PC
 Stop	 Stop / Hold	 CH+	 CH+ / Page+
 [≡i]	 Smart / List	 Vol-	 Vol-
 Text	 Text / Goto	 REP/Rec	 Rec / Rec Mode
 Subtitle	 Subtitle / EQ	 CH-	 CH- / Page-
 Freeze	 Shift + Pause / Step / Freeze	 1	 1


 







	Original	Replacement		Original	Replacement
	2	 2			
	3	 3			
	4	 4			
	5	 5			
	6	 6			
	7	 7			
	8	 8			
	9	 9			
	Audio	 Audio / Lang I/II			
	0	 0			
	Recall	 Back / Return			





Original	Replacement
Power	 Power
Mute	 Mute / Dimmer
Play	 Play / Slow
Pause	 Pause / Step / Freeze
Stop	 Stop / Hold
Rec	 Rec / Rec Mode
<</Hold	 << / Tune-
>>/Index	 >> / Tune+
I<<	 I<< / Preset-
>>I	 >>I / Preset+
Nicam/A2	 Audio / Lang I/II
Subtitle	 Subtitle / EQ
Subpage	 Eject / Surround
Size	 Zoom / Size
Sleep	 Sleep / Timer
DTV/Radio	 TV/Radio /
Reveal	 D.Menu / Top

Original	Replacement
TXT/MIX	 Text / Goto
Menu	 Menu / Home
Up	 Up
Info	 Info / Angle
Left	 Left
Enter	 OK
Right	 Right
Cancel	 Exit / Cancel / Clear
Down	 Down
Back	 Back / Return
Vol+	 Vol+
List	 Smart / List
CH+	 CH+ / Page+
Vol-	 Vol-
Mode	 Display / Media
CH-	 CH- / Page-
1	 1




























Original	Replacement	Original	Replacement
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
EPG	Guide / EPG / -/--		
0	0		
FAV	Fav / Marker / PC		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
<</Hold	Shift + Stop /		
FAV-	Shift + Left		

Original	Replacement	Original	Replacement
FAV+	Shift + Right		
-/--	Shift + Guide / EPG / -/--		


















Original	Replacement	Original	Replacement
Power	 Power	Up	 Up
Mute	 Mute / Dimmer	Info	 Info / Angle
Play	 Play / Slow	Left	 Left
Pause	 Pause / Step / Freeze	Ok	 OK
Stop	 Stop / Hold	Right	 Right
Rec	 Rec / Rec Mode	Exit	 Exit / Cancel / Clear
<</[Timer]	 << / Tune-	Down	 Down
>>/[≡?]	 >> / Tune+	Recall	 Back / Return
I<</[≡⇅]	 I<< / Preset-	Vol+	 Vol+
>>I/[≡...]	 >>I / Preset+	[≡i]	 Smart / List
Audio	 Audio / Lang I/II	Ch+	 CH+ / Page+
Subtitle	 Subtitle / EQ	Vol-	 Vol-
I<</[≡⇅]	 Zoom / Size	Ch-	 CH- / Page-
<</[Timer]	 Sleep / Timer	1	 1
Text	 Text / Goto	2	 2
Source/Av	 AV / Input / RDS	3	 3
[II]	 Menu / Home	4	 4

Original	Replacement	Original	Replacement
Power	 Power	Up	 Up
Mute	 Mute / Dimmer	Info	 Info / Angle
Play	 Play / Slow	Left	 Left
Pause	 Pause / Step / Freeze	Ok	 OK
Stop	 Stop / Hold	Right	 Right
Rec	 Rec / Rec Mode	Exit	 Exit / Cancel / Clear
<</[Timer]	 << / Tune-	Down	 Down
>>/[≡?]	 >> / Tune+	Recall	 Back / Return
I<</[≡⇅]	 I<< / Preset-	Vol+	 Vol+
>>I/[≡...]	 >>I / Preset+	[≡i]	 Smart / List
Audio	 Audio / Lang I/II	Ch+	 CH+ / Page+
Subtitle	 Subtitle / EQ	Vol-	 Vol-
I<</[≡⇅]	 Zoom / Size	Ch-	 CH- / Page-
<</[Timer]	 Sleep / Timer	1	 1
Text	 Text / Goto	2	 2
Source/Av	 AV / Input / RDS	3	 3
[II]	 Menu / Home	4	 4





Original	Replacement	Original	Replacement
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
Epg	 Guide / EPG / -/--		
0	 0		
Fav	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
Freeze	 Shift + Pause / Step /		

