



Original	Replacement
 POWER	 Power
 INFO	 Info / Angle
 HDMI CONTROL	 Smart / List
 SLEEP	 Sleep / Timer
 SCREEN	 Picture / Format
 SOURCE	 AV / Input / RDS
 PRESETS	 Setup / OPT /
 1	 1
 2	 2
 3	 3
 ZOOM/RED/▲	 Zoom / Size
 ZOOM/RED/▲	 Shift + CH+ /
 ZOOM/RED/▲	 Red / Netflix / Search
 4	 4
 5	 5
 6	 6
 REPEAT/GREEN/▼	 Shift + CH- / Page-

Original	Replacement
 REPEAT/GREEN/▼	 Green / APP / Repeat
 7	 7
 8	 8
 9	 9
 ROOT/YELLOW	 Yellow / YouTube / Repeat
 RETURN	 Back / Return
 0	 0
 MENU	 Menu / Home
 TITLE/BUE	 Sound / Title
 TITLE/BUE	 Blue / Prime Video / Random
 UP	 Up
 LEFT	 Left
 OK/SELECT	 OK
 RIGHT	 Right
 DOWN	 Down
 P+	 CH+ / Page+
 P-	 CH- / Page-





Original	Replacement
	VOL
	VOL
	PC
	LANG I/II
	EQ
	DIMMER
	SHIFT + RETURN
	GUIDE
	TOP MENU
	GOTO
	CLEAR
	MEDIA
	SHIFT + ANGLE
	SHIFT + NETFLIX
	REC MODE
	HOLD
	SLOW

Original	Replacement
	STEP-FREEZE
<< button"/>	TUNE-
>> button"/>	TUNE+
	PRESET-
>>I button"/>	PRESET+

