
 
 
 
 
 
 

 
 
 




 
 
 
 
 

 
 
 
 


 

 

 
 
 







Original	Replacement	Original	Replacement
	Power		Green / APP / Repeat
	DTV		Yellow / YouTube / Repeat
	TV		Blue / Prime Video / Random
	AV		Vol+
	1		Info / Angle
	2		CH+ / Page+
	3		Vol-
	4		Mute / Dimmer
	5		CH- / Page-
	6		Guide / EPG / -/--
	7		Setup / OPT /
	8		Up
	9		Left
	Text		OK
	0		Right
	PRE-CH		Down
	Red		Menu / Home





Original	Replacement	Original	Replacement
	Exit		Exit / Cancel / Clear
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	File List/[≡i]		Smart / List
	Bookmark/[.≡]		Display / Media
	Repeat/[≡O]		Shift + Green / APP / REPEAT
	A<>B/[≡?]]		Shift + Yellow / YouTube / REPEAT A-B
	PIC Size		Zoom / Size
	PIC Mode		Picture / Format
	SND Mode		Sleep / Timer
	M/S		D.Menu / Top

Original	Replacement

