



Original	Replacement	Original	Replacement
	POWER		Power
	←○		Shift + Smart / List
	**/Ö		Shift + Display / Media
	*²/♀		Shift + Red / Netflix /
	SOURCE		AV / Input / RDS
	PRESETS		Smart / List
	≡≡≡		Setup / OPT /
	♪/☺/▣		Display / Media
	SLEEP		Sleep / Timer
	1 . /@		1
	2 abc		2
	3 def		3
	4 ghi		4
	5 jkl		5
	6 mno		6
	7 pqrs		7
	8 tuv		8
	9 wxyz		9
	TV		TV/Radio /
	0		0
	↔		Shift + Back / Return
	TV GUIDE		Guide / EPG / -/-
	[≡]		Text / Goto
	MENU		Menu / Home
	Q.MENU		D.Menu / Top
	UP		Up
	LEFT		Left
	OK		OK
	RIGHT		Right
	DOWN		Down
	BACK		Back / Return
	→◻←		Picture / Format
	EXIT		Exit / Cancel / Clear
	*FAV		Fav / Marker / PC





Original	Replacement
 VOL+	 Vol+
 MUTE	 Mute / Dimmer
 P+	 CH+ / Page+
 VOL-	 Vol-
 INFO	 Info / Angle
 P-	 CH- / Page-
 REC	 Rec / Rec Mode
 PLAY	 Play / Slow
 PAUSE	 Pause / Step / Freeze
 STOP	 Stop / Hold
 LANG.	 Audio / Lang I/II
 <<<	 <<< / Tune-
 >>>	 >>> / Tune+
 [≡]...	 Sound / Title
 RED	 Red / Netflix / Search
 GREEN	 Green / APP / Repeat
 YELLOW	 Yellow / YouTube / Repeat

Original	Replacement
 BLUE	 Blue / Prime Video / Random

