



Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol+
 TV/RAD	 TV/Radio /	 Mute	 Mute / Dimmer
 Input	 AV / Input / RDS	 PR+/Page Up	 CH+ / Page+
 AV Mode	 Picture / Format	 Vol-	 Vol-
 Energy Saving	 Eject / Surround	 PR-/Page Down	 CH- / Page-
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Menu	 Menu / Home
 6	 6	 Down	 Down
 7	 7	 Return	 Back / Return
 8	 8	 Red	 Red / Netflix / Search
 9	 9	 Green/Stop	 Green / APP / Repeat
 List	 Smart / List	 Green/Stop	 Stop / Hold
 0	 0	 Yellow/Play	 Yellow / YouTube / Repeat
 Q.View	 Display / Media	 Yellow/Play	 Play / Slow

Original	Replacement	Original	Replacement
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			





Original	Replacement	Original	Replacement
 Blue/Pause	 Blue / Prime Video / Random		
 Blue/Pause	 Pause / Step / Freeze		
 Text/[≡]	 Text / Goto		
 T.OPT/Left arrow	 Left arrow / Preset-		
 T.OPT/Left arrow	 Setup / OPT /		
 T.OPT/Left arrow	 Left arrow / Tune-		
 Subtitle/Right arrow	 Right arrow / Preset+		
 Subtitle/Right arrow	 Subtitle / EQ		
 Subtitle/Right arrow	 Right arrow / Tune+		
 Simplink	 Sleep / Timer		
 Q.Menu	 D.Menu / Top		
 Info	 Info / Angle		
 Guide	 Guide / EPG / -/--		
 FAV/Mark	 Fav / Marker / PC		

Original	Replacement	Original	Replacement

