
 
 
 
 

 

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 

 
 
 
 

 




Original	Replacement
 Power	 Power
 Tv/Radio	 TV/Radio /
 Eject	 Eject / Surround
 Media	 Shift + Display / Media
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Size	 Zoom / Size
 <<	 << / Tune-
 Subpage	 Smart / List
 >>	 >> / Tune+
 D.Setup	 Setup / OPT /
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 FAV	 Fav / Marker / PC
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Index	 Info / Angle

Original	Replacement
 Lang/Audio	 Audio / Lang I/II
 Hold	 Shift + Stop /
 Text	 Text / Goto
 Subtitle	 Subtitle / EQ
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0
 Recall	 Back / Return
 Vol+	 Vol+





Original		Replacement	
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-
	Red/Goto		Red / Netflix / Search
	Green/Angle		Green / APP / Repeat
	Yellow/Repeat		Yellow / YouTube / Repeat
	Blue/A-B		Blue / Prime Video / Random
	Menu		Menu / Home
	Display		Display / Media
	Title/Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Source		AV / Input / RDS

Original		Replacement	
	D.Menu		D.Menu / Top
	EPG		Guide / EPG / -/--

