 





Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Nicam/A2	 Shift + Audio / Lang I/II
 Aspect	 Shift + Picture / Format
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0

Original	Replacement
 Recall	 Back / Return
 Display	 Display / Media
 Freeze	 Pause / Step / Freeze
 Rec/Auto	 Rec / Rec Mode
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Sleep	 Sleep / Timer
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear





Original	Replacement
CH+ CH	CH+ / Page+ + CH PAGE
Subtitle SUBTITLE	Subtitle / EQ EQ SUBTITLE
Vol+ VOL	Vol+ + VOL
CH- CH	CH- / Page- - CH PAGE
T.Shift T SHIFT	Setup / OPT / OPT-TOOLS SETUP
Vol- VOL	Vol- - VOL
Play/Pause/Hold HOLD	Play / Slow SLOW
Play/Pause/Hold HOLD	Shift + Stop / SHIFT + HOLD
<</Reveal REVEAL	<< / Tune- TUNE-
>>/Size SIZE	Zoom / Size SIZE ZOOM
>>/Size SIZE	>> / Tune+ TUNE+
Stop/Index INDEX	Stop / Hold HOLD
I<< PRESET-	I<< / Preset- PRESET-
S.Page/>>I S PAGE	>>I / Preset+ PRESET+
Text TEXT	Text / Goto GOTO TEXT
FAV	Fav / Marker / PC PC FAV MARKER
Audio AUDIO	Audio / Lang I/II LANG I/II AUDIO

Original	Replacement
DTV DTV	Smart / List LIST SMART
EPG EPG	Guide / EPG / -/- -- GUIDE EPG
Tv/Radio TV/RADIO	TV/Radio / PROGRAM TV/RADIO

