



Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu / Home
 Eject	 Eject / Surround	 Home	 Shift + Menu /
 1	 1	 Back	 Back / Return
 2	 2	 Up	 Up
 3	 3	 Left	 Left
 4	 4	 OK	 OK
 5	 5	 Right	 Right
 6	 6	 Down	 Down
 7	 7	 Stop	 Stop / Hold
 8	 8	 Play/Pause	 Play / Slow
 9	 9	 Info	 Info / Angle
 X/ Shuffle	 AV / Input / RDS	 <<	 << / Tune-
 0	 0	 >>	 >> / Tune+
 Repeat	 Shift + Green / APP / REPEAT	 I<<	 I<< / Pre-set-
 Vol-	 Vol-	 >>I	 >>I / Pre-set+
 Mute	 Mute / Dimmer	 Red	 Red / Netflix / Search
 Vol+	 Vol+	 Green	 Green / APP / Repeat

Original	Replacement	Original	Replacement
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			





Original	Replacement
EPG	Guide / EPG / -/--
TXT	Text / Goto
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Setup	Setup / OPT /
Tv Sys.	TV/Radio /
Audio	Audio / Lang I/II
Subt.	Subtitle / EQ
→I/Goto	Shift + Right
I>/Slow	Shift + Play /
Angle	Shift + Info / Angle
Zoom	Zoom / Size
Rec	Rec / Rec Mode
Edit	D.Menu / Top
Copy	Picture / Format
Timeshift	Sleep / Timer

Original	Replacement

