







 

























 

 

 

 































Original	Replacement
	 Power
	 Mute / Dimmer
	 1
	 2
	 3
	 Eject / Surround
	 4
	 5
	 6
	 Shift + Text /
	 7
	 8
	 9
	 0
	 Menu / Home
	 AV / Input / RDS
	 Up

Original	Replacement
	 Left
	 OK
	 Right
	 Down
	 D.Menu / Top
	 Exit / Cancel / Clear
	 Vol+
	 Sound / Title
	 CH- / Page-
	 Vol-
	 Picture / Format
	 CH+ / Page+
	 Sleep / Timer
	 Shift + Picture / Format
	 Setup / OPT /
	 Shift + Back / Return
	 Text / Goto





	Original	Replacement	
	EPG	 Guide / EPG / -/--	
	Play	 Play / Slow	
	Pause	 Pause / Step / Freeze	
	Stop	 Stop / Hold	
	FAV	 Fav / Marker / PC	
	Info	 Info / Angle	
	Red/DVD/USB	 Red / Netflix / Search	
	Green/Title	 Green / APP / Repeat	
	Yellow/PBC	 Yellow / YouTube / Repeat	
	Blue/Angle	 Blue / Prime Video / Random	
	<<	 << / Tune-	
	>>	 >> / Tune+	
	I<<	 I<< / Preset-	
	>>I	 >>I / Preset+	
	Return	 Back / Return	
	Display	 Display / Media	
	DVD Audio	 Audio / Lang I/II	

	Original	Replacement	
	Subtitle	 Subtitle / EQ	
	Reveal	 +  Shift + Exit / Cancel / Clear	
	Hold	 +  Shift + Stop /	
	List	 Smart / List	
	Index	 TV/Radio /	
	Subpage	 +  Shift + Smart / List	
	Size	 Zoom / Size	
	Mix	 +  Shift + Display / Media	
	Freeze	 +  Shift + Pause / Step /	

