







 

























 

 

 

 































Original	Replacement
	 Power
	 Mute / Dimmer
	 1
	 2
	 3
	 Eject / Surround
	 4
	 5
	 6
	 Shift + Text /
	 7
	 8
	 9
	 0
	 Menu / Home
	 AV / Input / RDS
	 Up

Original	Replacement
	 Left
	 OK
	 Right
	 Down
	 D.Menu / Top
	 Exit / Cancel / Clear
	 Vol+
	 Sound / Title
	 CH- / Page-
	 Vol-
	 Picture / Format
	 CH+ / Page+
	 Sleep / Timer
	 Shift + Picture / Format
	 Setup / OPT /
	 Shift + Back / Return
	 Text / Goto





Original	Replacement	Original	Replacement
	EPG		Guide / EPG / --
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	FAV		Fav / Marker / PC
	Info		Info / Angle
	Red/DVD/USB		Red / Netflix / Search
	Green/Title		Green / APP / Repeat
	Yellow/PBC		Yellow / YouTube / Repeat
	Blue/Angle		Blue / Prime Video / Random
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Return		Back / Return
	Display		Display / Media
	DVD Audio		Audio / Lang I/II

Original	Replacement	Original	Replacement
	Subtitle		Subtitle / EQ
	Reveal		Shift + Exit / Cancel / Clear
	Hold		Shift + Stop /
	List		Smart / List
	Index		TV/Radio /
	Subpage		Shift + Smart / List
	Size		Zoom / Size
	Mix		Shift + Display / Media
	Freeze		Shift + Pause / Step /

