

 








 









 

 

 

 
 



 





Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Pre Ch
 Audio/Nicam	 Dual
 Display	 Shift + Info
 Exit	 Exit
 Auto	 Smart

Original	Replacement
 Tv Menu	 Menu
 -/--	 Shift + Guide
 Guide	 Guide
 Source	 AV
 Enter	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 CH-	 Ch -
 CH+	 Ch +
 Vol-	 Vol -
 Vol+	 Vol +
 Text	 Text
 <<	 <<
 >>	 >>
 Hold	 Options





Original	Replacement	Original	Replacement
 Index	 Info	 Yellow	 Yellow
 I<<	 I<<	 Blue	 Blue
 Size	 Format	 P.Mode	 Shift + Format
 >>I	 >>I	 S.Mode	 Shift + Dual
 Play/Pause	 Play		
 Stop/Subpage	 Stop		
 Zoom/Reveal	 3D		
 Sleep	 Sleep		
 Rec	 Rec		
 Media	 Media		
 Repeat/FAV-	 Shift + Text		
 FAV	 Shift + Pre Ch		
 FAV+	 Shift + AV		
 Subtitle	 Subt		
 Tv/Radio	 TV/R		
 Red	 Red		
 Green	 Green		

