


 

 

 

 






 






 

 
 



 
 





	Original	Replacement	Original	Replacement
	Power		TIMER	AV
	Mute		BBS	Subt
	Function		MEM. CLK-ADJ.	Back
	Band		REPEAT	Text
	Intro		RAN.	Media
	Stop		1	1
	Play		2	2
	Pause		3	3
	I<</HR./Tun Dn		4	4
	Tun		5	5
	Vol+		6	6
	Vol-		7	7
	EQ Mode		8	8
	Find/Mo/St		9	9
	Mem/Dir-Up		+0/+00	0
	Mem/Dir-Dn			
	Sleep	