



 

 

 

 
 
 






 
 
 
 
 
 
 
 

 

 

 

 





Original	Replacement
 Power	 Power
 Tv/TXT	 Text
 Play/Pause/Cancel	 Play
 <</Hold	 <<
 >>/Size	 >>
 l<</Subpage	 l<<
 >>l/Index	 >>l
 Input	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Replacement
 0	 0
 REP/Reveal	 Smart
 Recall	 Pre Ch
 -/--	 Shift + Guide
 Right	 Right
 Left	 Left
 Up	 Up
 Down	 Down
 OK	 Ok
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Menu	 Menu
 Exit	 Exit
 Mute	 Mute
 Nicam/A2	 Dual





Original	Replacement
 Display	 Shift + Info
 Picture	 Shift + Format
 Sound	 Shift + Dual
 Sleep	 Sleep
 Subtitle	 Subt
 EPG	 Guide
 FAV	 Shift + Pre Ch
 Info	 Info
 Tv/Radio	 TV/R
 CH/List	 Options
 Aspect	 Format
 DTV	 Rec
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

Original	Replacement

