



Original	Replacement
Power	Power
DTV/VCR	AV / Input / RDS
Mute	Mute / Dimmer
Info	Info / Angle
Play	Play / Slow
Pause	Pause / Step / Freeze
Menu	Menu / Home
EPG	Guide / EPG / -/--
Exit	Exit / Cancel / Clear
Up	Up
CH+	CH+ / Page+
Left	Left
Vol-	Vol-
OK	OK
Right	Right
Vol+	Vol+
Rec List	Smart / List

Original	Replacement
CH-	CH- / Page-
Down	Down
Favorite	Fav / Marker / PC
1	1
2	2
3	3
Game	Display / Media
4	4
5	5
6	6
Recall	Back / Return
7	7
8	8
9	9
0	0
Tv/Radio	TV/Radio /
Audio	Audio / Lang I/II





Original	Replacement
Subtitle	Subtitle / EQ
Text	Text / Goto
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Record	Rec / Rec Mode
Stop	Stop / Hold
<<	<< / Tune-
>>	>> / Tune+

Original	Replacement

