 

 

 

 





 

 









 



 



 



 

 

 



 

 

 



 

 





 

 

 







Original	Replacement	Original	Replacement
 Power	 Power	 Input	 AV / Input / RDS
 1	 1	 Tv/Rad	 TV/Radio /
 2	 2	 AV Mode	 Shift + AV / Input / RDS
 3	 3	 Energy/Saving	 Eject / Surround
 4	 4	 Portal	 Display / Media
 5	 5	 Vol+	 Vol+
 6	 6	 Vol-	 Vol-
 7	 7	 P+	 CH+ / Page+
 8	 8	 P-	 CH- / Page-
 9	 9	 Info	 Info / Angle
 0	 0	 Exit	 Exit / Cancel / Clear
 Q.View	 Sound / Title	 Back	 Back / Return
 Home	 Menu / Home	 OK	 OK
 Q.Menu	 D.Menu / Top	 Up	 Up
 Guide	 Guide / EPG / -/--	 Down	 Down
 List	 Smart / List	 Right	 Right
 Mute	 Mute / Dimmer	 Left	 Left



