 



 







 


 


 

 



 



 
 
 



 
 
 


 


 
 
 



 
 
 
 
 

 

 



 
 




 





Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu
 Mute	 Mute	 Exit	 Exit
 1	 1	 Source	 AV
 2	 2	 Display	 Info
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 Enter	 Ok
 8	 8	 Lang/Audio	 Dual
 9	 9	 Reclist	 List
 0	 0	 Rec	 Rec
 DTV/ATV	 Smart	 FAV/List	 Pre Ch
 Return	 Back	 Freeze	 Media
 P.Mode	 Shift + Format	 Vol+	 Vol +
 S.Mode	 Shift + Dual	 Vol-	 Vol -
 Sleep	 Sleep	 CH+	 Ch +





Original	Replacement
CH-	Ch -
EPG	Guide
Aspect	3D
<<<	<<<
>>>	>>>
Pause/Timeshift	Pause
I<</Cancel	I<<
>>I/Sub.Pg	>>I
Stop/Index	Stop
Play	Play
Tv/Radio	TV/R
Subtitle	Subt
Reveal	Options
Size	Format
Hold	Eject
Text	Text
Red	Red

Original	Replacement
Green	Green
Yellow	Yellow
Blue	Blue

