



Original	Replacement
SOURCE	AV / Input / RDS
	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
EPG	Guide / EPG / -/--
0	0
PRE-CH	Back / Return
HDMI	Shift + 0
YPbPr	Setup / OPT /
Video	Shift + 4

Original	Replacement
PC	Shift + Fav / Marker / PC
CH+	CH+ / Page+
	Mute / Dimmer
	Vol+
	Vol-
	Zoom / Size
CH-	CH- / Page-
	Audio / Lang I/II
	Sound / Title
	Picture / Format
	Sleep / Timer
	Up
	Left
	OK
	Right
	Menu / Home
	Exit / Cancel / Clear





Original	Replacement
	Down
	Info / Angle
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Text / Goto
	Shift + Text /
	Shift + Zoom /
	>> / Tune+
	Play / Slow
	Subtitle / EQ
	Stop / Hold
	<< / Tune-
	Fav / Marker / PC
	Smart / List
	Shift + Audio / Lang I/II

Original	Replacement
	Pause / Step / Freeze

