





| Original | Replacement |
|--|---|
|  Power |  Power |
|  Source |  AV / Input / RDS |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  TV |  TV/Radio / |
|  0 |  0 |
|  Recall |  Fav / Marker / PC |
|  V+ |  Vol+ |
|  Mute |  Mute / Dimmer |
|  P+ |  CH+ / Page+ |

| Original | Replacement |
|--|---|
|  V- |  Vol- |
|  World/Internet |  Smart / List |
|  P- |  CH- / Page- |
|  Menu |  Menu / Home |
|  Q.Menu |  D.Menu / Top |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  Back |  Back / Return |
|  Exit |  Exit / Cancel / Clear |
|  i |  Info / Angle |
|  Music/Camera |  Display / Media |
|  TV Guide |  Guide / EPG / -/- |
|  */O |  Shift + 1 |
|  */Q |  Shift + 2 |





| Original | | Replacement | | Original | | Replacement | |
|---|----------|---|-----------------------------|----------|--|-------------|--|
|  | [≡]/Text |  | Text / Goto | | | | |
|  | Red |  | Red / Netflix / Search | | | | |
|  | Green |  | Green / APP / Repeat | | | | |
|  | Yellow |  | Yellow / YouTube / Repeat | | | | |
|  | Blue |  | Blue / Prime Video / Random | | | | |
|  | Lang |  | Audio / Lang I/II | | | | |
|  | [≡].. |  | Sound / Title | | | | |
|  | [-O-] |  | Setup / OPT / | | | | |
|  | << |  | << / Tune- | | | | |
|  | Pause |  | Pause / Step / Freeze | | | | |
|  | >> |  | >> / Tune+ | | | | |
|  | Rec |  | Rec / Rec Mode | | | | |
|  | Play |  | Play / Slow | | | | |
|  | Stop |  | Stop / Hold | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

