
 

 


 
 
 

 
 
 
 
 
 
 
 
 




 

 


 
 
 




 






Original	Replacement	Original	Replacement
	Standby		Power
	Auto		Smart
	Tv/Radio		TV/R
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	Back		Back
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Nicam/A2		Options
	Aspect		3D
	Display		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Menu		Menu
	Exit		Exit
	Source		AV
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Sleep		Sleep





Original	Replacement
 Fav	 Pre Ch
 Fav-	 Shift + Ch -
 Fav+	 Shift + Ch +
 Hold	 Shift + AV
 EPG	 Guide
 Text	 Text
 Lang	 Dual
 Subtitle	 Subt
 Index	 List
 Reveal	 Eject
 Subpage	 D. Menu
 Media	 Media
 Size	 Format
 Play	 Play
 Pause	 Pause
 <<<	 <<<
 >>>	 >>>

Original	Replacement
 Rec	 Rec
 Stop	 Stop
 I<<<	 I<<<
 >>>I	 >>>I
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

