
 



 





Original	Replacement
 Power	 Power
 E-Manual	 Shift + D. Menu
 []/Ratio	 Dual
 Input	 AV
 Tv/Rad	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 List	 List
 Q.View	 Format

Original	Replacement
 3D	 3D
 Vol+	 Vol +
 Vol-	 Vol -
 FAV	 Pre Ch
 Mute	 Mute
 P+	 Ch +
 P-	 Ch -
 Menu	 Menu
 Home	 Smart
 Back	 Back
 My	 D. Menu
 Guide	 Guide
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left





Original		Replacement		Original	Replacement
	OK		Ok		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	Text		Text		
	Subtitle		Subt		
	Stop/Live Tv		Stop		
	T.Opt		Options		
	Play		Play		
	Pause		Pause		
	<<		<<		
	>>		>>		
	Rec		Rec		
	Info		Info		
	Simplink		Media		
	Saving Energy	 + 	Shift + 3D		

