


 

 
 

 
 
 
 
 
 
 

 
 



 

 

 
 
 
 
 






 

 

 

 
 
 
 



 

 




Original	Replacement	Original	Replacement
	Power		Up
	Stop		Down
	Pause		Right
	Rec		Left
	<<		Ok
	Play		Ch +
	>>		Ch -
	Source		Vol +
	[] / TV		Vol -
	[<>] / Format		Mute
	Home		Red
	Smart TV		Green
	List		Yellow
	[i] / Info		Blue
	Adjust		1
	Options		2
	Back		3





	Original	Replacement		Original	Replacement
		4		4	
		5		5	
		6		6	
		7		7	
		8		8	
		9		9	
		0		0	
		Exit		Exit	
		Text		Text	

