
 

 
 
 

 


 


 
 






Original	Replacement
 Power	 Power
 PP	 Pre Ch
 Mute	 Mute
 I-II	 Dual
 P<P	 Back
 -/--	 Guide
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Vol+	 Vol +

Original	Replacement
 Vol-	 Vol -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 M	 Ok
 PR+	 Ch +
 PR-	 Ch -
 M	 Menu
 Red/Sound	 Red
 Green/Picture	 Green
 Yellow/Feature	 Yellow
 Blue/Install	 Blue
 TV	 TV/R
 AV	 AV
 [≡]	 Text
 [≡o]	 Smart





Original	Replacement	Original	Replacement
 [=+]	 Subt		
 [=x]	 Options		
 [.:≡]	 Media		
 [=?]	 Format		
 [=i]	 List		
 [=♦]	 3D		
 [i]/Info	 Info		

