




















Original	Replacement
 Power	 Power
 Source	 AV
 HDMI 1	 List
 Tv/DTV ◆	 TV/R
 AV	 Shift + AV
 HDMI ◆	 D. Menu
 Scart ◆	 3D
 YPBPR	 Options
 PC	 Back
 Media ◆	 Media
 Sleep	 Sleep
 Picture	 Shift + Format
 Sound	 Dual
 Menu	 Menu
 Exit	 Exit
 Size	 Format
 Info	 Info

Original	Replacement
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 P+	 Ch +
 P-	 Ch -
 EPG	 Guide
 FAV ◆	 Pre Ch
 Txt	 Text
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Tv/Radio	 Shift + TV/R
 Red	 Red
 Green	 Green
 Yellow	 Yellow





Original	Replacement	Original	Replacement
 Blue	 Blue	 4	 4
 Play	 Play	 5	 5
 <<	 <<	 6	 6
 >>	 >>	 7	 7
 Stop	 Stop	 8	 8
 Rec	 Rec	 9	 9
 I<	 I<<	 0	 0
 >I	 >>I	 Rec List	 Shift + Rec
 Audio	 Shift + Dual	 @	 Smart
 Stop Rec	 Shift + Stop		
 Freeze	 Pause		
 Subtitle	 Subt		
 Repeat Lang / [≐?]	 Shift + Text		
 Zoom I-II / [≐◇]	 Eject		
 1	 1		
 2	 2		
 3	 3		

Original	Replacement	Original	Replacement
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 Rec List	 Shift + Rec		
 @	 Smart		

