



| Original  | Replacement   |
|---|---|
|    |  Power             |
|    |  Fav / Marker / PC |
|    |  Mute / Dimmer     |
|    |  1                 |
|    |  2                 |
|    |  3                 |
|    |  4                 |
|    |  5                 |
|    |  6                 |
|    |  7                 |
|   |  8                |
|  |  9               |
|  |  Back / Return   |
|  |  0               |
|  |  Display / Media |
|  |  I<< / Preset-   |
|  |  >>I / Preset+   |

| Original  | Replacement   |
|---|---|
|    |  Play / Slow                 |
|    |  Stop / Hold                 |
|    |  Pause / Step / Freeze       |
|    |  Up                          |
|    |  Left                        |
|    |  OK                          |
|    |  Right                       |
|    |  D.Menu / Top                |
|    |  Down                        |
|    |  Menu / Home                 |
|   |  Subtitle / EQ              |
|  |  Info / Angle              |
|  |  Zoom / Size               |
|  |  Green / APP / Repeat      |
|  |  Yellow / YouTube / Repeat |
|  |  Audio / Lang I/II         |

