 

 







 















 


















 




Original	Replacement
 Standby	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Aspect	 Shift + Picture / Format
 Recall	 Back / Return
 TVG	 Guide / EPG / -/-
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II

Original	Replacement
 Display	 Display / Media
 Tv/Radio	 Tv/Radio /
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 FAV	 Fav / Marker / PC
 Vol+	 Vol+
 Vol-	 Vol-
 Rec	 Rec / Rec Mode
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Media	 Shift + Display / Media
 Source	 AV / Input / RDS





Original	Replacement
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer
 Text	 Text / Goto
 Hold	 Shift + Stop /
 Reveal	 D.Menu / Top
 Subpage	 Setup / OPT /
 Play	 Play / Slow
 Pause/Timeshift	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Index	 Info / Angle
 Size	 Zoom / Size
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Red	 Red / Netflix / Search

Original	Replacement
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

