



Original		Replacement		Original		Replacement	
	Power		Power		4		4
	Source		AV		5		5
	Rec		Rec		6		6
	Play		Play		7		7
	Pause		Pause		8		8
	Stop		Stop		9		9
	Lang		Dual		0		0
	<<		<<		Tv		TV/R
	>>		>>		Recall		Pre Ch
	[≡]..		Subt		Up		Up
	Red		Red		Down		Down
	Green		Green		Right		Right
	Yellow		Yellow		Left		Left
	Blue		Blue		OK		Ok
	1		1		Menu		Menu
	2		2		Back		Back
	3		3		Exit		Exit





Original		Replacement		Original	Replacement
	Q.Menu		D. Menu		
	World		Media		
	Music/Photo/Video		Smart		
	*/o		3D		
	*/Q		Eject		
	Tv List		List		
	Text		Text		
	i		Info		
	Size		Format		
	Vol+		Vol +		
	Vol-		Vol -		
	Mute		Mute		
	P+		Ch +		
	P-		Ch -		

