 





 

 

 

 

 

 

 

 



 

 
 
 

 



 

 

 

 



 

 





 







 







 

 

 

 

 

 


 
 

 

 


 




Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	FAV		Fav / Marker / PC
	0		0
	TXT		Text / Goto
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	3D		Shift + 3
	?		Display / Media
	@		Info / Angle
	Menu		Menu / Home
	Up		Up
	Left		Back / Return
	OK		OK
	Right		Right
	Tools		Setup / OPT /
	Down		Down
	Guide		Guide / EPG / -/-
	Vol+		Vol+
	Source		AV / Input / RDS
	P+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer





Original	Replacement
 P- P-	 CH- / Page-
 I<	 I<< / Preset-
 >I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec List	 Smart / List
 OQ	 Audio / Lang I/II
 [...].	 Subtitle / EQ

Original	Replacement

