 









 






 


 


 
 

 
 


 
 

 

 
 

 
 



 
 


 







 


 
 



 








Original	Replacement	Original	Replacement
 Power	 Power	 P+	 Ch +
 Source	 AV	 P-	 Ch -
 1	 1	 CH List	 List
 2	 2	 Smart Hub	 Smart
 3	 3	 Menu	 Menu
 4	 4	 Search	 TV/R
 5	 5	 Tools	 Options
 6	 6	 Info	 Info
 7	 7	 Return	 Back
 8	 8	 Exit	 Exit
 9	 9	 Up	 Up
 0	 0	 Down	 Down
 TTX/MIX	 Text	 Right	 Right
 PRE-CH	 Pre Ch	 Left	 Left
 Vol+	 Vol +	 Enter	 Ok
 Vol-	 Vol -	 Red	 Red
 Mute	 Mute	 Green	 Green





Original	Replacement	Original	Replacement
 Yellow	 Yellow		
 Blue	 Blue		
 Social TV	 Media		
 HDMI	 Subt		
 3D	 3D		
 E-Manual	 D. Menu		
 P.Size	 Format		
 SRS	 Dual		
 <<<	 <<<		
 I<<<	 I<<<		
			
 >>>	 >>>		
 >>I	 >>I		
 Rec	 Rec		
 ▶	 Play		
 ■	 Stop		

