

 
 


 

 


 
 
 


 



 


 
 


 



 
 


 
 
 


 
 





 







 



 



 



 




Original	Replacement	Original	Replacement
 Power	 Power	 List.Grab	 List
 Mute	 Mute	 P+	 Ch +
 1	 1	 P-	 Ch -
 2	 2	 Menú	 Menu
 3	 3	 Entrada	 AV
 4	 4	 Salir	 Exit
 5	 5	 Info	 Info
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 OK	 Ok
 DTV/ATV	 Smart	 Imagen	 Format
 Recall	 Back	 Sonido	 Dual
 V+	 Vol +	 Sleep	 Sleep
 V-	 Vol -	 Leng	 Shift + Dual
 Grabar	 Rec	 FAV/List	 Pre Ch





Original		Replacement		Original		Replacement	
	Congelar		Media		[+]		Eject
	Red		Red		[≡]		Text
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	<<		<<				
	Guía		Guide				
	Play		Play				
	Pause/Timeshift		Pause				
	>>/Tamaño		>>				
	I<</Cancelar		I<<				
	>>I/Sub PG		>>I				
	Stop/Indice		Stop				
	Tv/Radio		TV/R				
	[...]		Subt				
	[≡?]		Options				
	[♦]		3D				

