



Original		Replacement		Original		Replacement	
	Power		Power		Down		Down
	Power Tv		Shift + Power		Right		Right
	Open/Close		Eject		Left		Left
	Net Service		Media		OK		Ok
	Input Tv		AV		Home		Smart
	Bluetooth		TV/R		<<		<<
	Red		Red		Play		Play
	Green		Green		>>		>>
	Yellow		Yellow		I<<		I<<
	Blue		Blue		Pause		Pause
	♥		Pre Ch		>>I		>>I
	Netflix		Shift + Media		Stop		Stop
	Top Menu		Menu		Subtitle		Subt
	Pop Up/Menu		D. Menu		Audio		Dual
	Return		Back		Tv Vol+		Vol +
	Options		Options		Tv Vol-		Vol -
	Up		Up		Mute		Mute





	Original	Replacement	Original	Replacement
DISPLAY	Display	DISPLAY INFO		

