

 
 



 

 

 

 

 

 
 


 

 

 
 


 











 




 
 




 

 

 




 

 
 

 
 








 


Original	Replacement	Original	Replacement
	Power		Power
	TV/DTV		Smart
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	Info		Info
	FAV		Shift + Pre Ch
	Picture		Shift + Format
	Sound		Shift + Dual
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CH+		Ch +
	CH-		Ch -
	Menu		Menu
	EPG		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	I/II		Dual
	Still		Format
	Zoom		Eject
	Exit		Exit





Original	Replacement
 Radio	 TV/R
 Next	
 Lang	
 Subtitl	
 Back	
 Forward	
 Play	
 Pause	
 Stop	
 Red	
 Green	
 Yellow	
 Blue	
 Text	
 PIP Size	
 Swap Reveal	
 Cancel/CH Up	

Original	Replacement
 Mix/CH Down	
 Subcode/Source	
 Index/Position	
 Hold/Sleep	